Print on plain white paper - Part # 122919

ASSEMBLING INSTRUCTIONS
DOCTOR'S STOOL

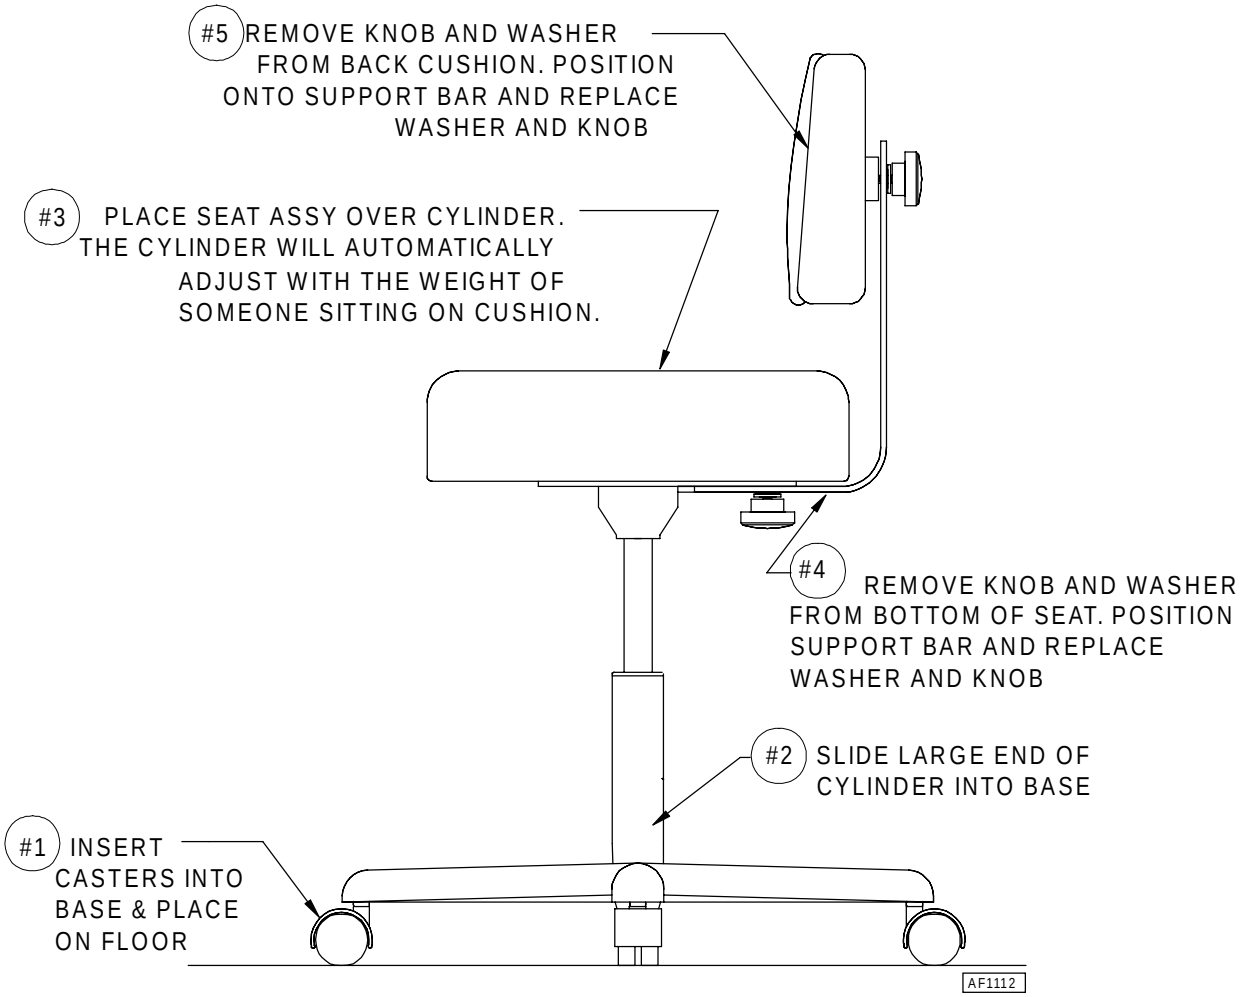
#5 REMOVE KNOB AND WASHER FROM BACK CUSHION. POSITION ONTO SUPPORT BAR AND REPLACE WASHER AND KNOB
#3 PLACE SEAT ASSY OVER CYLINDER. THE CYLINDER WILL AUTOMATICALLY ADJUST WITH THE WEIGHT OF SOMEONE SITTING ON CUSHION.
#4 REMOVE KNOB AND WASHER FROM BOTTOM OF SEAT. POSITION SUPPORT BAR AND REPLACE WASHER AND KNOB
#2 SLIDE LARGE END OF CYLINDER INTO BASE
#1 INSERT CASTERS INTO BASE & PLACE ON FLOOR
AF1112

CLEANING UPHOLSTERY

NEVER USE ANY SOLVENT, ABRASIVE CLEANERS OR DETERGENT CONTAINING AMMONIA TO CLEAN THE UPHOLSTERY. DO NOT APPLY OIL, FURNITURE POLISH OR VARNISH TO THE UPHOLSTERY AS THESE ARE CERTAIN TO DAMAGE THE MATERIAL.

WHEN SOILED, THE UPHOLSTERY MAY BE CLEANED IN THE FOLLOWING MANNER:

(1) USE LUKEWARM WATER AND ANY MILD SOAP.
(2) WORK UP THIN SUDS ON A CLOTH OR FINE SYNTHETIC SPONGE AND GO OVER THE UPHOLSTERY SURFACE.
(3) GO OVER THE SURFACES AGAIN, USING A CLOTH DAMPENED WITH CLEAR WATER TO RINSE OFF ALL SOAP.
(4) FINISH BY DRYING THE SURFACE WITH A SOFT, LINT FREE CLOTH.

CLEANING AND POLISHING PAINTED AND POLISHED PARTS

PAINTED AND CHROME PLATED SURFACES SHOULD BE WIPED WITH A SOFT CLOTH AND WASHED OCCASIONALLY WITH A DAMP CLOTH AND MILD SOAP. FOR FURTHER CLEANING AND PRESERVATION OF THE SURFACE LUSTER, APPLY ONE OF THE AUTOMOBILE WAXES.

LUBRICATION

THE ONLY LUBRICANT REQUIRED ON THE STOOL IS ONE OR TWO DROPS OF LIGHT HOUSEHOLD OIL TO EACH CASTER AXLE EVERY SIX MONTHS.

Knight®
by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542